Tiffcofio

Outdoor Light Sensor Timer

Model:MH-RF2411

Wireless Remote Control

2 grounded outlets
Built-in darkness-sensing photocell
Photocell Mode: Turn devices on at dusk f or 2, 4,5,6, 8 hours or untildawn Timer function repeats set program daily
Transmitter works through walls, windows, and doors (100ft range)Manual On/Off override button
LED indicators
Built-in overload protector
Command1 Expandable

Specifications

2 Grounded outlets
125VAC / 60HZ / 15A / 1875W Resistive
15A / 1875w tungsten

PHOTOCELL (DARKNESS-SENSING) MODE

Select from the following:

ON: Power will turn ON instantly.The ( ) and ( )indicator on the receiver will illuminate

OFF: Power will turn [OFF] instantly.
All indicators on the receiverwillturn off.

2HR,4HR,5HR,6HR,8HR:

When pressed, power will be turned [ON] at dusk and off after the2/4/5/6/8HR selected countdown time.
The corresponding 2HR,4HR,5HR,6HR, 8HR and( ) indicators on the receiver will illuminate. All indicators will turn off after the programis completed.

Dusk Function: When press the( ), the power will turn ON at Duskand turn OFF at Dawn.Only the( )indicator will illuminate.

MANUAL CONTROL

You can press the button on the receiver to select the function manually

COMMAND TRANSMITTER PAIRING

Note: Your Command1 Transmitter and Receiver contained in this package are pre-programmed and ready to use. Command1 Pairing is only required for using additional transmitters or if the channel has been changed on the transmitter.This unit is equipped with patented Command 1 technology. All TiFFCOFiOindoor and outdoor transmitterse have the ability to be paired with all TiFFCOFiO indoor and

outdoor receivers. Please follow the directions below transmitter to your receiver.

1. Plug the receiver into power,Locate the power [ON/OFF] button on the receiver.
2. Press and hold the power button for 6 seconds. The LED power indicator will begin to flash slowly.
3. On your transmitter, press [ON] wait 2 seconds and then press[OFF]. The LED indicator will now stop flashing.
4. You have successfully paired the transmitter to your receiver.

SAVE THESE INSTRUCTIONS!

If you have any questions, please feel free to contact us. Our professional technicians will give you detailed answers

RESETTING THE UNIT

You can reset and remove all paired transmitters on your receiverby doing the following:

1. Press and hold the[ON/OFF] button on the receiver for 30 seconds.The LED indicator will begin to flash rapidly. then release the [ON/OFF] button for 1 second and press once again to confirm reset.The LED indicator should now be OFF.
2. Your unit has now been reset and does not have any pairedtransmitters.

BATTERYINFORMATION AND REPLACEMENT

The Remote Control uses a 3 volt CR2032 lithium batterymaking sure to match up the + and - polarity markings.To test, press the ON or OFF buttons to makesure the LED lights up. Do not dispose of batteries in fire. Batteries may explode or leak.

WARNING :

DO NOT splice, repair or modify. Unplug when not in use. Fullyinsert plug. DO NOT use damnaged remote sets Inspect periodic -ally. Use within the electrical rating marked on the remote set. DO NOT plug more than a total of 1875 watts into this remote ground stake. If watts are not marked on appliance, multiply ampere rating (on nameplate)by 125 to determine equivalent watts. Add determin -ed watts for each pluggedin appliance or lamp (sum of watts on bulbs) to find total watts being used.Operating temperature range -30C(-22F) to 45°C(113°F).Suitable for damp locations. Changes or modifications not expressly approved by the party responsible for compliance could void the user' s authority to operate the equipment.

- Only use the batteries specified and be sure to match the + and - polaritymarkings.
- Do not mix old batteries and new batteries or standard(carbon-zinc) with alkaline batteries.
- Remove exhausted or dead batteries from the product
- Remove batteries if product is not to be used for a long time.
- Do not dispose of batteries in fire. Batteries may explode or leak. As withall small items, these batteries should be kept away from children.If swallowed, seek medical attention immediately.

CUSTOMER SERVICE

30-Day Return Policy

If you're not completely satisfied with your purchase, simply returnthe merchandise via Amazon Orders.Unused merchandise can be refunded or exchanged within 30 daysfrom the original purchase date.

3-Years Warranty

We guarantee your product is free from defects in product materialand workmanship for three (3) years starting from the date of purchaseduring normal use of household conditions. If your appliance failsto operate properly within our warranty period, we will arrange anew replacement free of charge and cover all the shipping costs.

Quick Response within 12 Hours

if you are still unable to resolve the issue you are experienci -ng, pleasecontact us immediately at our support email. It doesn't matter if theproduct has been installed, our customer support team will responowithin 12 hours and assist you quickly and efficiently. The most efficientway to confirm your problem to us is to attach a video illustratingyour product issue.

CONTACT US

① Log into your Amazon.com account, click "Returns&Orders" top-right corner

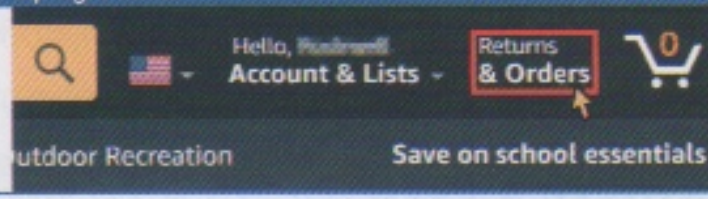

② Find your order in the list and click "View order details"

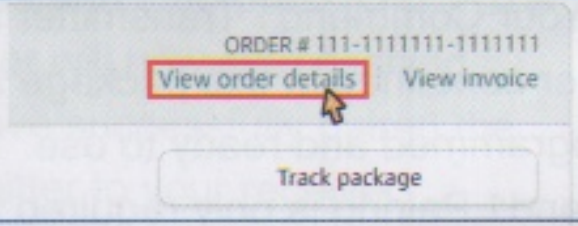

③ Click the "store name" following the Sold by, below the prod

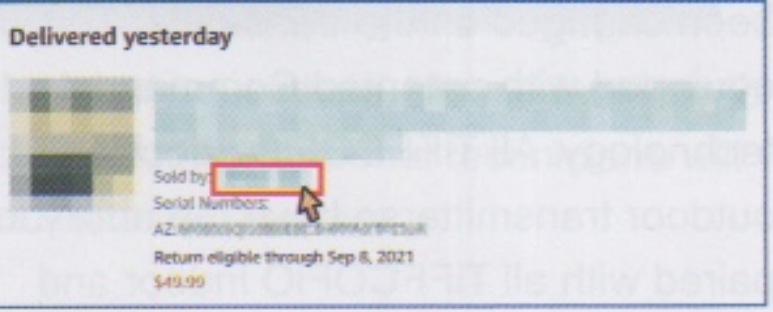

④ Click the yellow button "Ask a question on the top-right contact the seller.

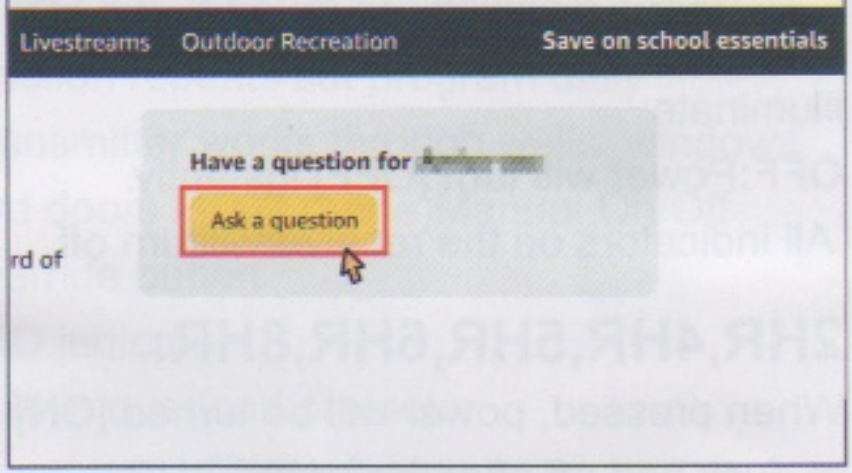

hould you experience any issues while operating any of our products, you can directly reach out to our Customer Support via Amazon Orders. Or you can send your inquiry to our Official Customer Support at

Contact via Email: support@tiffcofiocn.com